




## I.C.W.S Project iOS App

User's manual  
Version 1.0.1




Search the ICWS App for iPhone in the App Store and download it on your device free or charge.

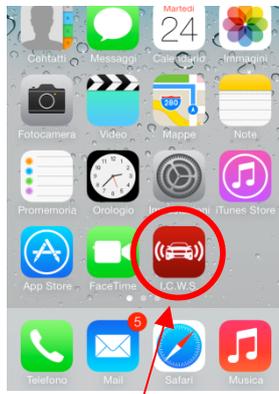


Click on the new Icon (I.C.W.S.).  
The new App opens.



Once opened, the App asks you the APP 'ASSWORD (you can decide your personal password in order to protect the App).

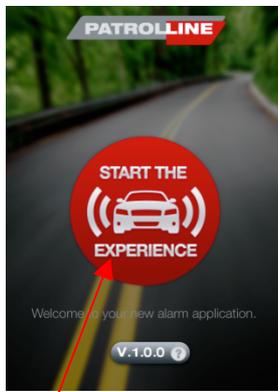


When you can press the main button to get the App options.

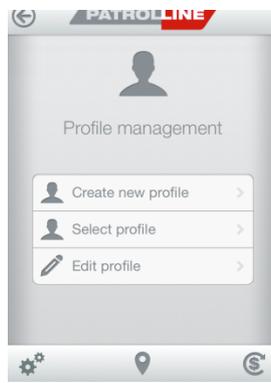

: first time you have to create a new profile.



Fill this page in as follows: 1) name of the profile; 2) car SIM number; 3) alarm password default: 1234; 4) App language menu; 5) press "save profile".

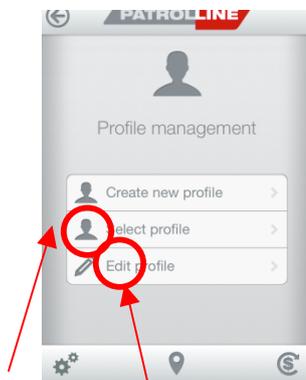

If you have already created a valid profile, please use it from "Select profile". If you need to change something among the points from 1 to 5, press "Edit profile" and modify it.



er saving the profile, the main screen of the App is shown.



Pressing "a" icon, you will see the command able to manage the status of the system.

Pressing the RED icon, you can ARM the system on APP). The GREEN one disarms it and, with "?", you can ask about the status of the system.

Nuovo messaggio Annulla  
A: Angelo Chianese, +



selected the option desiderate press "send message"



pressing "b" icon, you will see the command able to manage the remote start engine.

pressing the GREEN icon, you can START the engine the car (via APP). The RED one stops this function with "Set timer" you can fix an alarm time in order remind you that you have to send a sms command for remote control starter.



pressing "c" icon, you will see a command able to manage the remote engine stop of the car.  
pressing the RED icon, you can stop the engine and,  
with the GREEN one, you can unlock engine stop.


Nuovo messaggio Annulla  
A: Angelo Chianese, +



selected the option desiderate press "send message"



pressing "d" icon, you will see a command  
ile to know battery voltage and dashboard  
temperature.

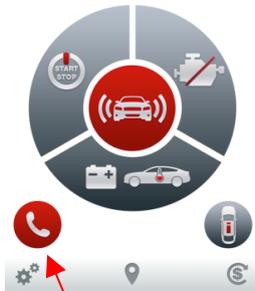

pressing "e" icon you can the alarm system and, after 4 rings, you can listen what's happening inside the car (silent mode). If you close the call at the second ring, the system will tell you: 1) status of the system; 2) status of the engine; 3) battery voltage; 4) dashboard temperature.



pressing “+” icon, you will see a command  
to know the status of the alarm (armed or  
disarmed).



By pressing "h" icon, you will see the map showing car and iPhone positions. Wireless as Antenna and function not available yet.



pressing "i" icon, you will see a command able to  
now the prepaid SIM card credit of the system).  
his command is valid only in case of prepaid SIM  
cards and in case of credit info by SMS (no vocal  
message). This function depends on the setting into  
"Advanced setting" ("g" icon).



pressing "L" icon, you can come back to the "Profile menu".




Pressing “g” icon, you will see the advanced menu of the App.




pressing "Credit" menu, you will see the network  
ing command used, to get the residual credit of the  
vehicle SIM CARD (ex: \*123#, depending on the  
network operator used).



pressing "Agenda" menu, you will see the 4 fields usable to record user's phone references and store them in the system.

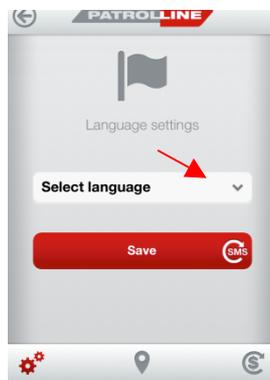


pressing "Language" menu, you will see the guage setting possibilities of the SMS alarm system.

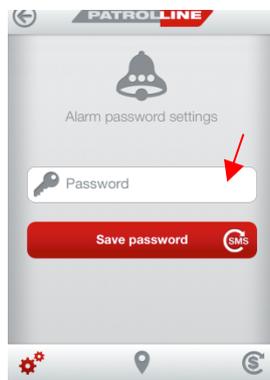


pressing "Alarm password" menu, you will see the field usable to change the alarm password (default: 1234).




pressing "App password" menu, you will see the  
I usable to change App password (the one required  
hen launching the App) and/or switch off/on the  
password option.

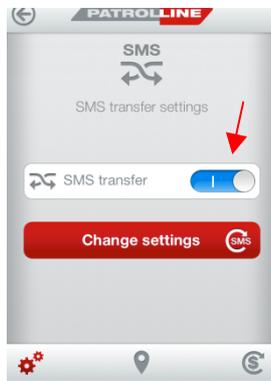


pressing "SMS transfer" menu, you will see function allowing to get on user's phone every SMS that the alarm system gets from unknown phone numbers.

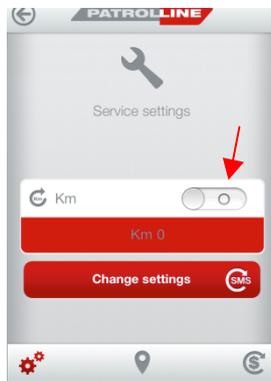

By pressing "Service setting" menu, you will have a function allowing to get KM information from the car when reached the set value.

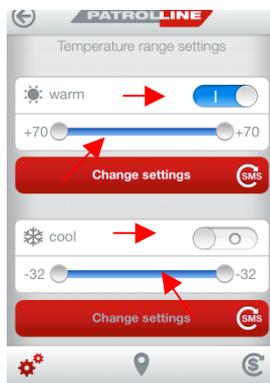

pressing "Temperature Range" menu, you will see setting possibilities (Summer/Winter) and here you can fix the desired temperature range during the remote control engine start function.

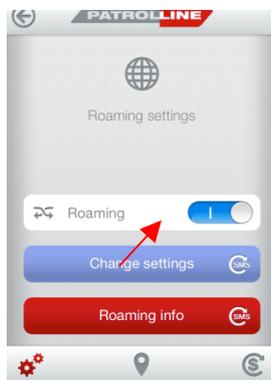

By pressing "Roaming" menu, you will see setting roaming possibilities, allowing or denying the roaming traffic cost of the SIM card.



pressing "Installer" menu, you will see the option  
possibilities to temporarily transfer the managing of  
system to the installer or to a new installer in order  
to effect the necessary adjustments.